

BACK FLOW ALARM CONTROLLER

INSTRUCTIONS FOR RESETTING THE CONTROLLER

- 1) Insert key
- 2) Turn key to on Position (right)
- 3) Push Reset Button (Red light goes out)
- 4) Turn key to Off Position (Left)

Facilities and the location of the backflow alarms

Altura	West wall-Main mech. Room
Boston	South wall Main mech room
Crawford	In main water room by north center entry doors
Jamaica CDC	West wall main mech. Room
Paris Elementary	Boiler room -West wall near exit door
Sixth Ave.	Boiler room-West wall
Virginia Court	East wall main mech room
Wheeling Elementary	East wall main mech room
North Mdl. School	Custodial room near East entry
South Middle	North Side Stage in cage
West Mdl.	North wall Main Boiler room
Central High	West side of stage in cage area
Hinkley	Main water room across from main boiler room
Vista Peak	West wall main mech. Room
Quest	East wall main mech room

